




WIFI SETUP

WIFI MANUAL

SETTING UP YOUR ROUTER

Follow these steps:-

1. Go to **Basic** and select **Wireless**.
2. Change your preferred SSID and password and click **Save**.

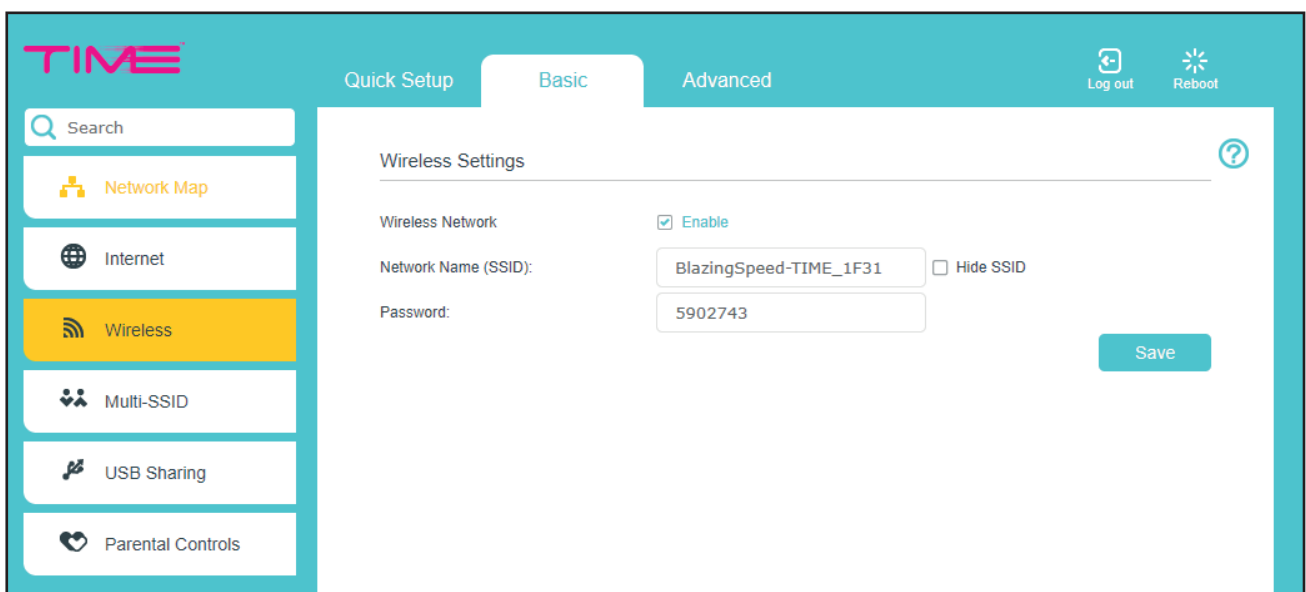

The screenshot displays the TIME router's configuration interface. The top navigation bar includes the 'TIME' logo, tabs for 'Quick Setup', 'Basic', and 'Advanced', and buttons for 'Log out' and 'Reboot'. A left sidebar contains a search bar and menu items: 'Network Map', 'Internet', 'Wireless' (highlighted in yellow), 'Multi-SSID', 'USB Sharing', and 'Parental Controls'. The main content area is titled 'Wireless Settings' and features a 'Wireless Network' section with an 'Enable' checkbox checked. Below this, the 'Network Name (SSID)' is set to 'BlazingSpeed-TIME_1F31' and the 'Password' is '5902743'. A 'Hide SSID' checkbox is present and unchecked. A 'Save' button is located at the bottom right of the settings area.