


WiFi QUICK SETUP GUIDE LINKSYS EA6350

SETTING UP YOUR ROUTER

FOLLOW THESE STEPS

1. Connect the router to your computer via **network cable** (plug into any LAN port) or **WiFi**.

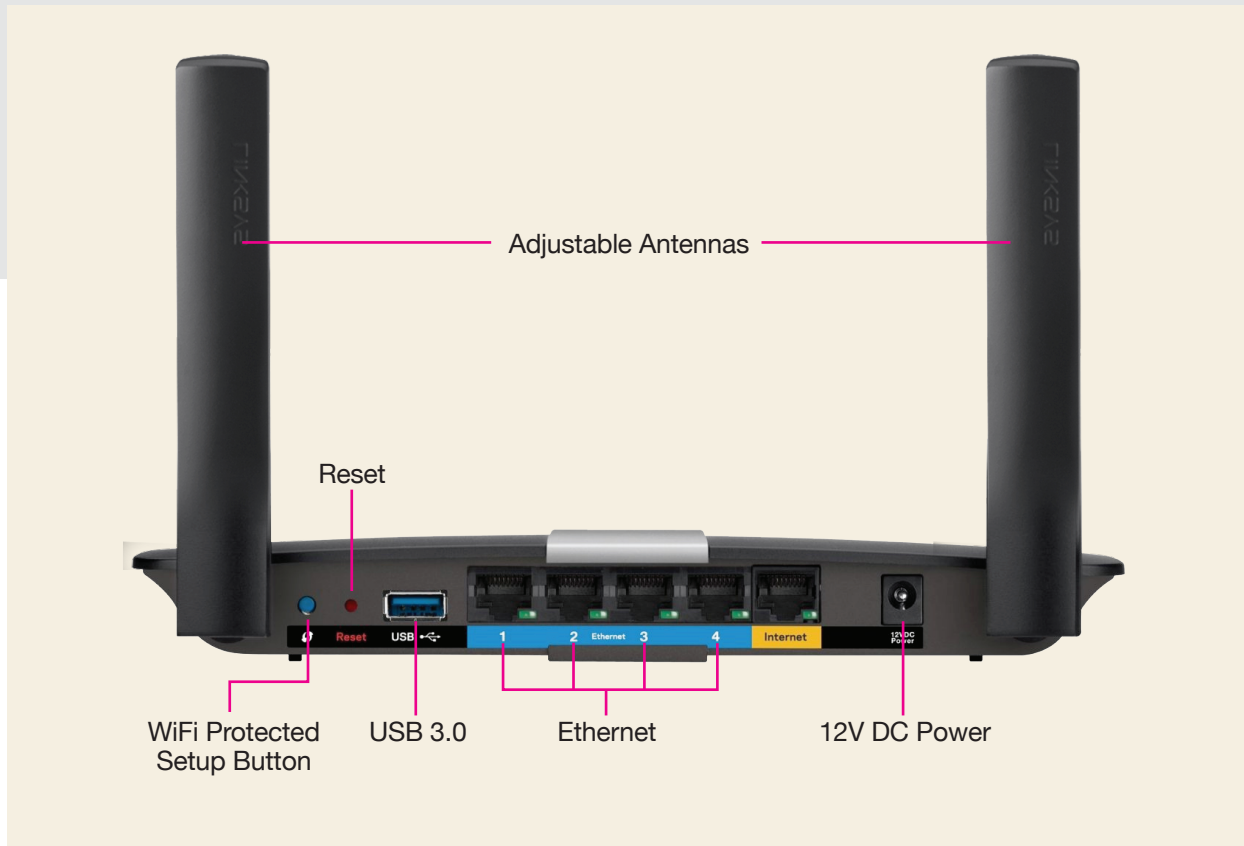

2. Open any browser & key in **192.168.1.1** or **linksysmartwifi.com** in the address bar, then hit **Enter**.
3. When the below screen appears, key in **admin** (default password) & click **Sign In**.

Sign In

Log in with your router password.

! Internet connection is down

You must have an Internet connection to log into your Linksys Smart Wi-Fi account. To access your router settings without Internet access, enter the router password and then click **Sign in**. After you log into your router, select **Connectivity** and then the **Internet Settings** tab to view and change connection settings. You may need to contact your Internet Service Provider for assistance with these settings.


Rebooting your modem and router may also fix the connection problem. To do this, disconnect the power cables, wait 2 minutes, and then reconnect the power cables.

Access Router


 Router Password

English (United States) ▾

4. When the screen below appears, select **Connectivity** from the left menu.

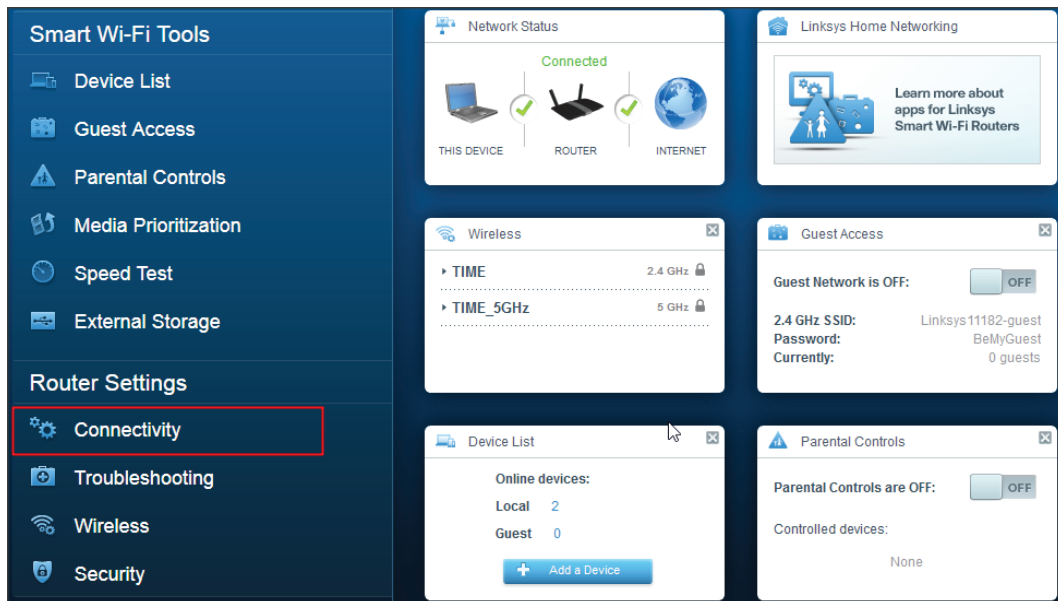

5. Click **Edit**, then change the network names & passwords as you desire.
(Tips: We recommend you maintain the ‘_5GHz’ behind your 5GHz network name for easy differentiation when you wish to connect).

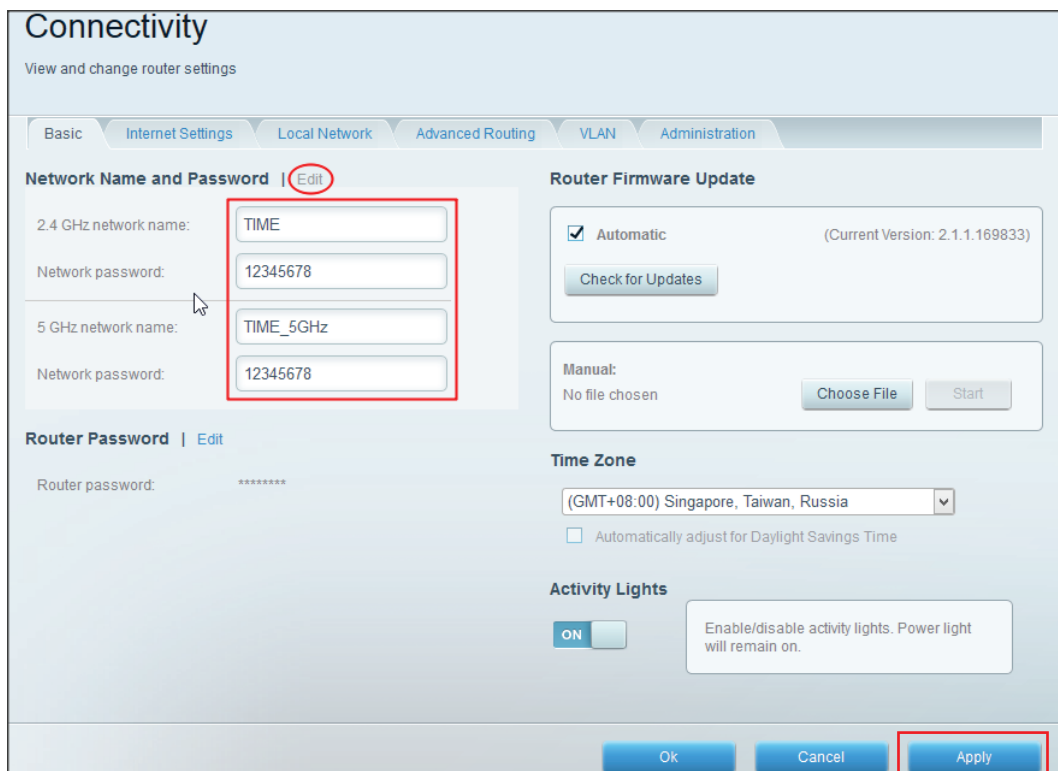

6. Click **Apply**.

7. Click **Yes**, then **OK** for the following.

You're updating network settings

Changing the wireless settings will disconnect all devices (including this one) from the router. Simply re-connect the devices using the new wireless settings below. You may want to write them down before continuing.

2.4 GHz network

SSID: TIME
Security Type: WPA2 Personal
Passphrase: 12345678

5 GHz network

SSID: TIME_5GHz
Security Type: WPA2 Personal
Passphrase: 12345678

Do you want to continue?

Applying Changes

Your router is applying changes

The action you performed may cause devices to temporarily lose connectivity. This may take a few minutes, please wait until the operation is completed.

Your WiFi settings will be saved & you are good to go!

*The changes made will disconnect all devices (including this one).
Reconnect the devices with your new wireless settings.

**YOU GET THE ROCKET.
WE DO THE SCIENCE.**